

# NEC DS and DSX Time Change

AFFORDABLE TELEPHONE SYSTEMS

Follow the instructions below for your particular software version. To determine the software version, you can press intercom + # \* # \*, or call Affordable Telephone Systems.

## NEC DSX Version 2 and NEC DS Series Time Change

From the main phone (usually x300), *WITHOUT lifting the handset* dial # **8 3**

Enter Time in military format: **HHMMSS**

Press **HOLD**

Press **HOLD** again to accept the date

Press **SPEAKER** to exit

## NEC DSX Version 3 Time Change

From the main phone (usually x301), *WITHOUT lifting the handset*

Press **Menu** (in LCD)

Dial **0 1**

Enter the time in military format: **HHMMSS**

Press **Save** (in LCD)