

SAMSUNG DCS SYSTEM DATE & TIME

This programming is done at any station with a Display Telephone

While on Hook press **TRSF** and dial **200**. Display shows **(ENABLE CUS. PROG. Password**

Dial **1234** Display shows **(ENABLE CUS. PROG. DISABLE**

Dial **1** Display shows **(ENABLE CUS. PROG. ENABLE**

Press Speaker Display shows **(201:CUS. PASSCODE**

Dial **505** Display shows **(TIME SETTING**

Enter the time as follows **WMMDDYY: HHMM**

W = Sun 0, Mon. 1, Tues. 2, Wed 3, Thur 4, Fri 5, Sat 6

MM= Month (2 digits)

DD = Day (2 digits)

YY = Year (2 digits)

:

HH= Hour (2 digit, 24 hr format)

MM= Minute (2 digit)

Press **TRSF** to store and exit.